

Reorder Tear-Aid from www.waterstrider.com !!!



Torn Canvas



Peel and Stick



Repair is Complete

GENERAL TEARS NOT ON AN EDGE


- STEP 1. Best results will be achieved when applied to a clean, dry surface. Surface temperature of product to be repaired should be 50°F or greater.
- STEP 2. Clean product to be repaired with an alcohol prep pad, or a 50-50 mixture of rubbing alcohol (isopropyl) and water. Before proceeding make sure surface is dry.
- STEP 3. Patch may be cut to size with scissors. Trim corners round before removing liner. Overlap patches 1" on tears larger than patch. Extend patch 1" from edge of all tears.
- STEP 4. Carefully peel back 1/2" of protective liner. Tearing the disposable back liner a little will aid in liner removal when the patch has been cut into smaller pieces.
- STEP 5. Position and anchor exposed 1/2" edge. Slowly remove liner on patch taking care to remove air pockets and seal edges. Rub entire patch aggressively. Do not put into washer or dryer.

TEARS ON AN OUTSIDE EDGE

- STEP 6. Follow Step 1 thru Step 5 with the following change! Position the patch leaving a one inch tab extended beyond the outside edge of the material and tear to be fixed.
- STEP 7. Apply the edge reinforcement line along the edge of the material by sticking it to the patch. The reinforcement line should be perpendicular to the open end of the tear creating a tough solid edge.
- STEP 8. Fold the 1" tab over the reinforcement line and adhere to the other side of the material. Rub entire patch aggressively and trim excess line. Apply another patch to the backside of the tear.

TIE-DOWN TARP HOLE REPAIRS

- STEP 9. One change must be made to Step 6. Position the patch leaving a three inch tab extended beyond the outside edge of the material. Center the patch over the existing tie-down ring. Apply edge reinforcement line. If needed, replace the tie-down ring by sticking a new ring to the patch before folding the patch over the ring.

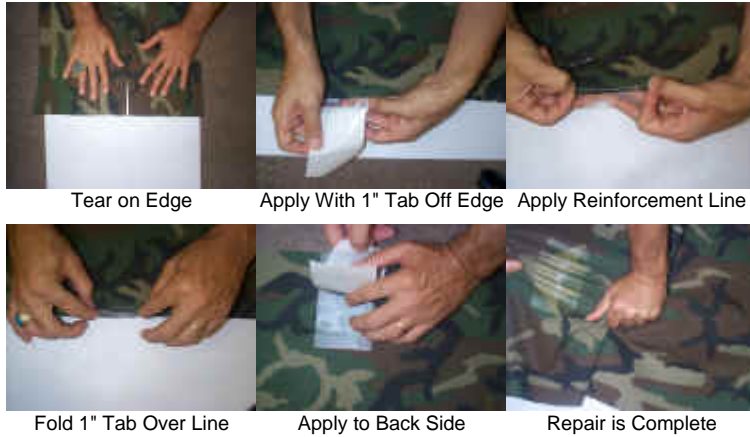

IMPORTANT NOTICE: TEARepair, Inc. MAKES NO WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Please remember that many factors can affect the use and performance of a TEARepair, Inc. product in a particular application. The materials to be bonded with the product, the surface preparation of those materials, the product selected for use, the conditions in which the product is used, and the time and environmental conditions in which the product is expected to perform are among the many factors that can affect the use and performance of TEARepair, Inc. product. Given the variety of factors that can affect the use and performance of this product, some of which are uniquely within the user's knowledge and control, it is essential that the user evaluate the TEARepair, Inc. product to determine whether it is fit for a particular purpose and suitable for the user's method of application. LIMITATION OF REMEDIES AND LIABILITY: If the product is proved to be defective. THE EXCLUSIVE REMEDY, AT TEARepair's OPTION, SHALL BE TO REFUND THE PURCHASE PRICE OF OR TO REPAIR OR REPLACE THE DEFECTIVE PRODUCT. TEARepair, Inc. shall not otherwise be liable for any loss or damages, whether direct, indirect, special, incidental, or consequential, regardless of the legal theory asserted, including negligence, warranty, or strict liability. "USER MUST STRICTLY" follow the application instructions and product repair list carefully to obtain proper bond.